Uniden®

BTS150

High Definition Bluetooth® Speaker

For more exciting new products please visit our website:

Australia: www.uniden.com.au

New Zealand: www.uniden.co.nz

OWNER'S **MANUAL**

Important Safety Instructions

- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Do not use this product while driving.
- Use only the power cord and batteries indicated in this manual. Do not expose the battery (or the device) to flames or dispose of it in a fire: the battery may explode. Check with local authorities for possible battery disposal instructions.
- Do not disassemble, modify, or attempt to repair any component of this product.
- Check the laws and regulations on the use of mobile phones and hands-free equipment in the areas where you drive. Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions require.

SAVE THESE INSTRUCTIONS!

Table of Contents

Important Safety Instructions 2

BTS150 HIGH-DEFINITION SPEAKER 4

What's in the Box? 4

SET UP YOUR BTS150 SPEAKER 5

Charge the Battery 5

Turn on Your Speaker 5

Pair Bluetooth Devices to Your Speaker.....5

GETTING TO KNOW THE BTS150 SPEAKER 7

BTS150 Top.....7

BTS150 Back.....8

LEDs 9

BTS150 SPEAKER OPERATION 10

Basic Mobile Phone Operations 10

Basic Music Operation 12

SPECIAL FEATURES 14

Play Music through a Wired Connection 14

TROUBLESHOOTING..... 15

SPECIFICATIONS 17

Compatibility 17

Two-Year Limited Warranty..... 18

BTS150 HIGH-DEFINITION SPEAKER

Uniden's BTS150 high-definition Bluetooth speaker provides clear stereo sound in a compact, portable package. With Bluetooth V2.0 compatibility, the BTS150 pairs with your mobile phone to become a speakerphone for hands free conversations. You can also connect your music player (wired or wireless) for crisp, clear audio.

- Bluetooth V2.0.
- Up to 2 Bluetooth devices can be paired with your speaker*.
- Supporting A2DP/AVRCP/HFP/HSP profiles.
- Portable
- Up to 5 hours of play from a fully-charged battery.
- Up to 33 ft (10 m).
- Call Waiting feature

* The Bluetooth Speaker can store pairing information for two devices but only one device can be connected at a time.

The BTS150 speaker is not a data storage device; do not attempt to copy files to it.

What's in the Box?

- BTS150 Speaker
- AC Adapter (E18-00774-01) with USB cable.

SET UP YOUR BTS150 SPEAKER

Charge the Battery

1. Slide the main power switch to the ON position (see page 8).
2. Insert the adapter's mini USB connection into your speaker's USB slot (see page 8).
3. Plug the adapter into your computer.
4. The LEDs flash blue while the battery is charging (charge time = 7.5 hours on a completely empty battery). The LEDs turn solid blue when the battery is fully charged.

Charge the battery fully before using the speaker.

Turn on Your Speaker

When you turn on your speaker for the first time, it automatically goes into pairing mode. The LEDs rapidly flash red and blue while in pairing mode. After you pair Bluetooth devices to your speaker, the next time you turn it on it searches for these paired devices and then moves into a standby state.

1. Slide the main power switch to the ON position.
2. Press and hold ⏻ for at least 3 seconds. A "power on" tone sounds.
3. The LEDs flashes blue and red slowly while looking for Bluetooth devices. It remains steady on (blue) when Bluetooth devices are discovered; otherwise, it keeps flashing.

Pair Bluetooth Devices to Your Speaker

Make sure your speaker has been fully charged and is in pairing mode.

Pair First Bluetooth Device

Pair your first Bluetooth device to your speaker when you turn your speaker on for the first time. Be sure your speaker is in pairing mode (see step 2-3 of 'Pair Second Bluetooth Device' below).

1. Select a Bluetooth V2.0 device (mobile phone or music player) to pair.
2. Select the *Searching* mode on your Bluetooth device (refer to your Bluetooth device's owner's manual for details if necessary).
3. Your Bluetooth device should find *BTS150*; select it and use *0000* for a pairing code if necessary.
4. Verify that you are connected to your speaker. The Bluetooth LED moves to a steady ON state when pairing is complete.

Pair Second Bluetooth Device

When you want to pair the second Bluetooth device:

1. Turn on your speaker.
2. Press and hold ⏻ until your speaker beeps twice.
3. Release ⏻ . The BTS150 is ready to pair.
4. Follow the same procedures for pairing your first Bluetooth device (see above).

The Bluetooth Speaker can store pairing information for two devices but only one device can be connected at a time. To switch between paired devices, disconnect the Bluetooth connection from the existing device (see manual for your Bluetooth device) and then connect the second device.

GETTING TO KNOW THE BTS150 SPEAKER

BTS150 Top

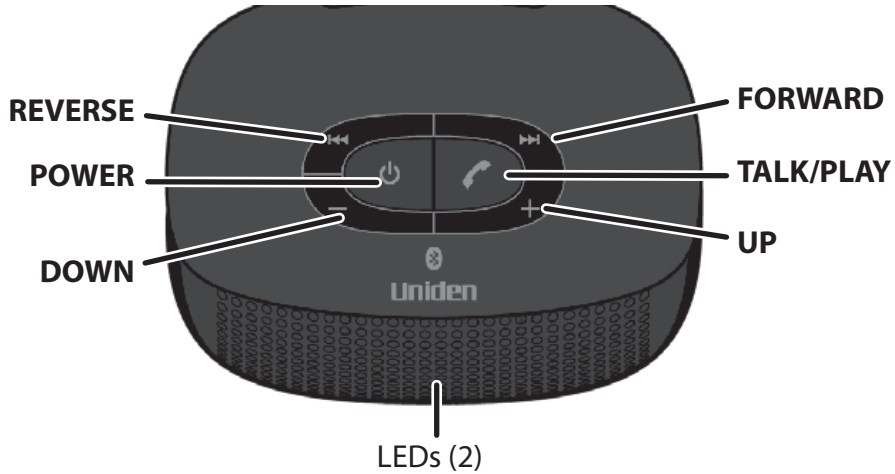

Key name	Icon	Press to ...
REVERSE	⏮	Rewind or skip back in music.
POWER	⏻	• Turn your BTS150 speaker on/off. • Press and hold to register devices.
DOWN	▬	Decrease the volume.
FORWARD	⏭	Fast forward or skip ahead in music.

Key name	Icon	Press to ...
TALK/PLAY		– Handle phone calls and play music. – Press and hold to register devices. **NOTE: This key can also turn your BTS150 speaker on and off.**
UP	+	Increase the volume.

BTS150 Back

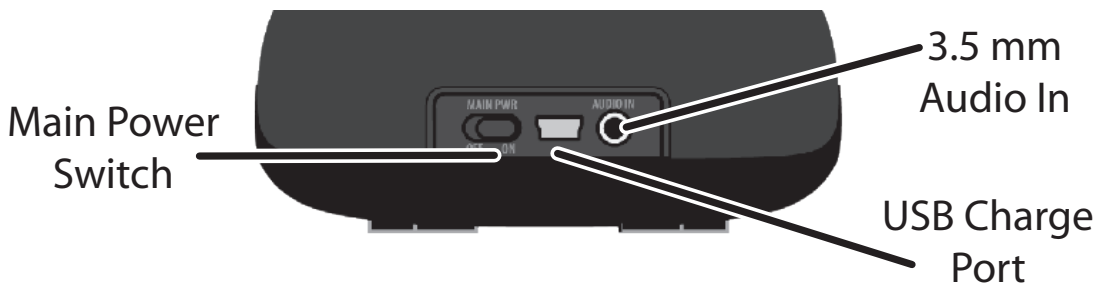

Use this...	To...
Main power switch	turn main power on and off.
USB charge port	connect your speaker to the AC adapter.
3.5 mm Audio In	connect non-Bluetooth devices.

LEDs

Two LEDs on the front of your speaker provide visual cues to different processes.

Color	State	Meaning
Blue	On	Power is on.
	Flashing	Slow flash - Battery is charging. Fast flash - Lost Bluetooth connection.
Red	On	Bluetooth is connected but the battery level is low.
	Flashing	Power almost gone and Bluetooth is not connected.
Blue and Red	Flashing	Pairing mode.
LED	Off	Power is off.

BTS150 SPEAKER OPERATION

When you want to turn on your speaker, remember to slide the main power switch to the ON position.

Press and hold for at least 3 seconds.

The + and − keys control the speaker's volume level during mobile phone operation and music playback. Press and release the keys to increase or decrease the volume level one step at a time. Press and hold + and − to quickly raise and lower the volume levels. Your speaker sounds an alert tone when it reaches the maximum upper and lower volume levels.

Basic Mobile Phone Operations

When you have an incoming call, the speaker sounds an incoming call tone and the LEDs flash blue. Both the speaker and your mobile phone may ring, depending on your mobile phone settings.

To...	Do this...
Answer an incoming call	Press any key.
Reject an incoming call	Press and hold .
End a call	Press .

To...	Do this...
Switch between your speaker and your mobile phone	Press and hold during an active call.
Redial the last incoming number	From standby, press twice.
Redial the last number dialed	From standby, press and hold .

Call Waiting

You can receive call waiting notification when your mobile phone is paired to your speaker. The LED flashes and your speaker sounds an alert tone.

Your mobile phone must subscribe to Call Waiting service to use these features; contact your telephone provider for more information.

To...	Do this...
Answer a call waiting call and put first call on hold	Press and release twice. The existing call is put on hold and the second call is now active.
Switch between current call and calls on hold	Press and release twice. The current call is put on hold and the call on hold is now active.
Answer a call waiting call and hang up first call	Press ; the first call is ended and the call waiting call is now active.

Basic Music Operation

When you pair a Bluetooth music player to your speaker, you can control operation through your speaker.

To...	Do this...
Play music	Press . **NOTE: When you stop or pause the music playback, the music resumes at the same volume level after you press .**
Skip to the next track	Press ▶▶|.

To...	Do this...
Fast forward	Press and hold ▶▶|.
Skip to the previous track	Press |◀◀ .
Rewind	Press and hold |◀◀ .
Control the volume	Press + to increase or − to decrease the volume.
Pause music	Press 📞 while the music is playing.
Stop playing music	Press and hold 📞 while the music is playing.

SPECIAL FEATURES

Play Music through a Wired Connection

You can still play music through your BTS150 speaker even if your music device is not paired to your speaker. You can physically connect your music device to your speaker with a 3.5 mm minijack cable (not included).

1. Plug one end of the cable into your music device, just like you would a pair of headphones.
2. Plug the other end of the cable into your speaker's 3.5 mm jack labeled **AUDIO IN**.
3. Use your music device to start and control music playback and volume through your speaker.

The following restrictions apply when you are playing music through a wired connection:

- If both a Bluetooth device and a wired device are connected to your speaker, the Bluetooth device will take priority over the wired device.
- The BTS150 does not control the wired device; it only plays music through a wired connection.
- If you are listening to music from the wired device and you press , your speaker will start playing music from the Bluetooth device if available.

TROUBLESHOOTING

If this happens...	Try this...
Disconnection due to Out of Range	Move back into connection range and: – Turn your speaker off and back on to reconnect to your Bluetooth device. – Press for reconnection. **NOTE: The speaker automatically connects to the last device connected. If you need to reconnect to the first device that was connected, power off and back on.**
No "Beep" sound after disconnection of A2DP HFP	Press and to connect to A2DP & HFP successfully.
Sound is not clear or there is no sound at all	– Turn your speaker off and then back on. – Turn off your music device's equalizer. – Check your speaker or Bluetooth device volume level.
Music won't play on the BTS150	– Make sure your Bluetooth device has A2DP. – Check if both devices are connected. – Turn your speaker off and then back on to auto-connect with your Bluetooth device.

If this happens...	Try this...
The BTS150 volume controls are not working.	– Change the volume from your Bluetooth device. – If your music device is wired into your speaker, you cannot change the volume through the speaker. – Check the battery level.
LED No Power	– Make sure your speaker is turned on. – Make sure your speaker is charged.
Sound is too small / too much distortion	– Adjust your speaker or Bluetooth device volume level. – Turn off your Bluetooth device's equalizer.
Phone call not answer by BTS150	– Make sure your mobile phone has HFP. – Verify that both devices are connected. – Restart your speaker to auto-connect with your Bluetooth device.
Music doesn't play after hanging up a call	Press to resume music.
BTS150 doesn't control the music	Make sure your Bluetooth device has AVRCP.

SPECIFICATIONS

- Total 6W output (3W / Channel)
- Full-range (35 mm) driver / Channel + Passive Radiator
- Li-Ion Batt: 1180mAh
- Playtime: Up to 5 hours in 80% Volume
- Recharging Time: 7.5 hours
- Range: Class 2, 10 m

Compatibility

- Bluetooth 2.0 or above device with A2DP/AVRCP/ HFP / HSP

Safety and Handling Information

For maximum product life, do not drop, throw, or crush the speaker. Do not expose it to humidity, dust, or temperatures above 51.6°C/125°F.

Lithium-Ion battery information

This device contains a non-removable lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

Two-Year Limited Warranty

UNIDEN BTS 150 Bluetooth Wireless Speaker

IMPORTANT Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor

The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 ("Uniden Aust") or Uniden New Zealand Limited ("Uniden NZ") as the case may be.

Terms of Warranty

Uniden Aust/NZ warrants to the original retail purchaser only that the BTS150 ("the Product"), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty Period

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (2) years from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

(A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner's Manual;

(B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;

(C) Improperly installed contrary to instructions contained in the relevant Owner's Manual

(D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or

(E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered

This warranty covers the Product and included accessories.

User-generated Data

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy

If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for Obtaining Warranty Service

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD
Service Division
345 Princes Highway,
Rockdale, NSW 2216
Phone number: 1300 366 895
Email address: custservice@uniden.com.au

OR

UNIDEN NEW ZEALAND LTD
Service Division
150 Harris Road, East Tamaki
Auckland 2013
Phone number: (09) 273 8377
Email address: service@uniden.co.nz

Uniden®

© 2011 Uniden Australia Pty Ltd/Uniden New Zealand Limited

Printed in PRC